
NOVELL GERTIFIED PROFESSIONAL

Laura Chappell

NetWare Link Services Protocol

Updating the Link State Database

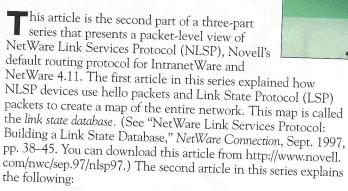

- How NLSP devices update the link state database when changes occur on the network
- How to change NLSP parameters

KEEPING IN TOUCH

As explained in the last issue of *NetWare Connection*, NLSP devices build the link state database by exchanging hello packets and LSP packets. By default, each NLSP device transmits an LSP packet approximately every two hours. This LSP packet contains information about the NLSP device's links, services, and external routers. For example, an LSP packet transmitted by an Intranet-Ware server would include information such as the services the server provides and its internal and external IPX addresses.

Each NLSP device uses a unique identification number called an LSP ID number to identify all of the device's LSP packets. To uniquely identify LSP packets, the NLSP device increments the sequence number in each LSP packet, whether or not other information has changed since this device sent its last LSP packet.

The higher the sequence number is, the more up-to-date the information in the LSP packet is. For example, suppose that the CORP-FS router were running on a network on which few changes were made. If the CORP-FS router transmitted an LSP packet with sequence number 4 at 8 a.m., this router would transmit an LSP packet with sequence number 5 at approximately 10



a.m. Both LSP packets would contain the same LSP ID number, such as LSP ID number 0x02-00-00-22-22-22-00-00.

If you were to monitor network communications over a 24-hour period, you would find that each NLSP device would send approximately 12 LSP packets, incrementing the sequence number in each LSP packet. However, if the structure or function of the network changed, an NLSP device might send more than 12 LSP packets during a 24-hour period. Network events such as the following affect the structure or function of the network:

- A circuit is established or broken. (A *circuit* is a logical connection to the network.)
- The cost of a route is changed. (Cost is a metric value used to differentiate links based on their available throughput. A slower link has a higher cost than a faster link. The preferred route is the route with the lowest cost from end to end.)
- The network has a new designated router. (Each network has one *designated router*, which helps the other NLSP devices maintain a map of the entire network.)
- An NLSP device becomes overloaded or ceases to be overloaded.
- You change a network number.
- You change a Service Advertising Protocol (SAP) service or a Routing Information Protocol (RIP) route.
- You change the NLSP system ID number or the name of an NLSP device.

If an NLSP device detects a network event that changes the structure or function of the network, the LSP packet that contains the updated information. The NLSP device transmits this LSP packet whether or not two hours have passed since the device last transmitted an LSP packet. For example, if you loaded the PSERVER NetWare Loadable

NOVELL GERTIFIED PROFESSIONAL

NetWare Link Services Protocol

Module (NLM) on an IntranetWare server, the server would then offer print services and would need to broadcast an updated LSP packet, advertising the new service. The IntranetWare server would use the same LSP ID number used to announce this server's presence on the network. However, the IntranetWare server would increment the sequence number of the LSP packet and include the new service information with its link information and other available services.

UPDATING THE LINK STATE DATABASE

When an NLSP device receives an LSP packet, the device checks its link state database to determine if the LSP packet contains a new LSP ID number or a known LSP ID number. If the link state database does not contain the LSP ID number listed in the LSP packet, the NLSP device makes a new LSP ID entry in its link state database. If the LSP packet has an LSP ID number that matches an LSP ID entry in the link state database, the NLSP device must determine if the LSP packet contains more up-to-date information than the information already recorded in the link state database.

To make this determination, the NLSP device compares the sequence number of the incoming LSP packet to the sequence number associated with the LSP ID entry in the link state database. If the incoming LSP packet has a higher sequence number than the existing LSP ID entry in the link state database, the NLSP device updates this entry.

Because each NLSP device updates its information at least every two hours and every time the network changes, the link state database contains accurate information. If you want to increase or decrease the default time interval between LSP packets, you can use Novell's INETCFG utility to reset this interval. (For more information about changing the default time interval, see the "Changing NLSP Parameters" section on p. 38.)

Complete Updates

To further ensure that each NLSP device has accurate information about the network, the designated router periodically transmits a summary of its link state database in a Complete Sequence Number Packet (CSNP). The designated router sends a CSNP at least every 30 seconds but not more than every five seconds.


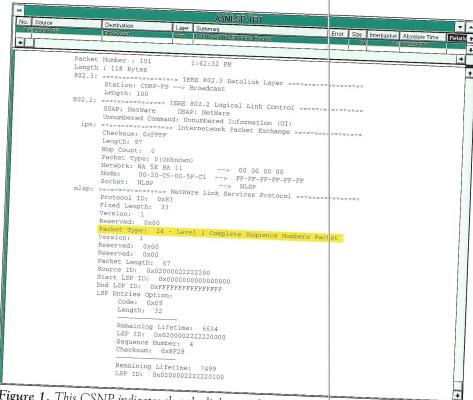


Figure 1. This CSNP indicates that the link state database contains two LSP ID entries.

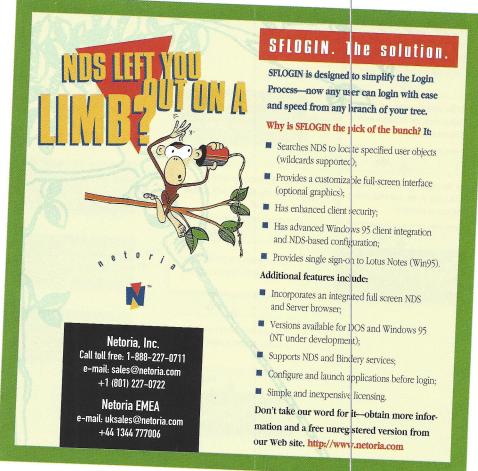

NOVELL CERTIFIED PROFESSIONAL

NetWare Link Services Protocol

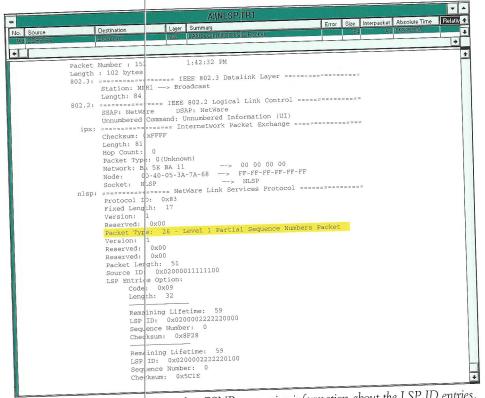


Figure 2. The MPR1 router sends a PSNP, requesting information about the LSP ID entries.

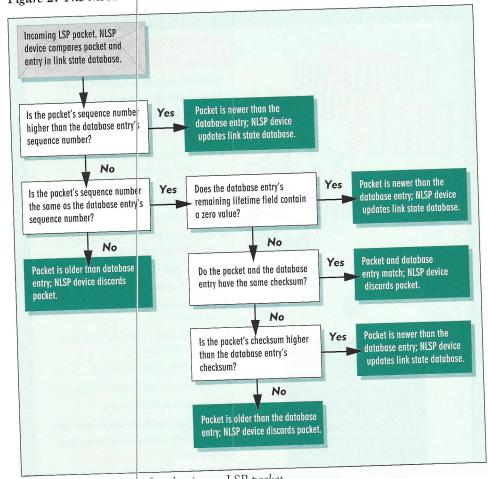


Figure 3. The process of evaluating an LSP packet

A CSNP lists the LSP ID number of every LSP ID entry in the designated router's link state database. A CSNP also includes the the sequence numbers and checksum values associated with the LSP ID number. (See Figure 1 on p. 35.)

In addition, a CSNP includes a remaining lifetime, or time-to-live, field for each LSP ID entry. This field indicates when the NLSP device that is associated with each LSP ID entry is expected to transmit the next periodic LSP packet.

Each NLSP device compares the CSNP to the device's link state database to see if there are any inconsistencies. If an NLSP device finds inconsistencies, the device takes one of the following actions, depending on if the designated router (the sender) has up-to-date information or if the NLSP device (the receiver) has up-to-date information:

 The Designated Router Has Up-to-Date Information. If the designated router has up-to-date information, the receiving NLSP device transmits a Partial Sequence Number Packet (PSNP) to the designated router. This PSNP contains the LSP ID number identifying the LSP ID entry that the NLSP device must update in its link state database.

For example, suppose that you added the MPR1 router to a network on which the CORP-FS router were already running. The MPR1 router would obviously not have all of the information about the network that the CORP-FS router has.

After receiving a CSNP from the CORP-FS router (see Figure 1 on p. 35), the MPR1 router would generate a PSNP (see Figure 2), requesting more information about the two LSP ID entries in the CSNP. To indicate that the MPR1 router's information about these LSP ID entries is outdated or nonexistent, the MPR1 router would set the sequence numbers for the entries to 0. After receiving the PSNP, the CORP-FS router would transmit an LSP packet containing the requested information to the MPR1 router.

 The Receiving NLSP Device Has Up-to-Date Information. If the receiving NLSP device has up-to-date information, this device does not transmit a PSNP. Instead, the receiving NLSP device transmits an LSP packet that contains the latest information (and a higher sequence number).

NOVELL CERTIFIED PROFESSIONAL

NetWare Link Services Protocol

In addition to the designated router, all of the other NLSP devices on the network receive this LSP packet, ensuring that all NLSP devices have accurate information about the network. After receiving the LSP packet, the designated router updates its link state database and includes the new information in the next CSNP transmitted.

RECEIVING DUPLICATE INFORMATION

In most cases, the sequence number clearly identifies if the incoming LSP packet or the link state database has upto-date information. Occasionally, however, an NLSP device may receive an incoming LSP packet that has the same LSP ID number and the same sequence number as an existing LSP ID entry in the link state database. In this case, the NLSP device examines two other fields contained in an LSP packet: the remaining lifetime field and the checksum field. Using these two fields, the NLSP device completes the process outlined in Figure 3 to determine if the incoming LSP packet or the existing LSP ID entry in the link state database has up-to-date information.

Remaining Lifetime Field

After an NLSP device determines that the LSP packet and the corresponding LSP ID entry in the link state database have the same sequence number, the device examines the remaining lifetime field. Because an NLSP device transmits an LSP packet approximately every two hours, each LSP packet includes a remaining lifetime field that indicates how long a receiving NLSP device should retain the information in the LSP packet. This aging mechanism ensures that NLSP devices purge information from the link state database when this information becomes outdated. The remaining lifetime is expressed in seconds.

The designated router includes the LSP ID entry's remaining lifetime value in the CSNP. For example, Figure 1 indicates that LSP ID 0x02-00-00-22-22-22-00-00 has a remaining lifetime of 6,634 seconds. (See p. 35.)

You can observe how remaining lifetime values decrease by examining CSNPs that are transmitted on the network. For example, Figure 4 lists the remaining lifetime values detected in five sequential CSNP packets.

After an LSP packet expires (the remaining lifetime of the LSP packet

LSP PACKET	CSNP 1 AT 1:48:16	CSNP 2 AT 1:48:44	CSNP 3 AT 1:49:11	CSNP 4 AT 1:49:37	CSNP 5 AT 1:50:04
LSP A	7199	7171	7144	7117	7090
LSP B	7166	7138	7111	7084	
LSP C	6285	6257	6230	the fill beautiful.	7057
LSP D	7151	7123		6203	6176
	7 10 1		7096	7069	7042

Figure 4. The remaining lifetime value decreases with each CSINP sent.


reaches zero), an NLSP device performs the following tasks:

- The NLSP device retains only the LSP packet header in the link state database, indicating that the remaining lifetime is zero.
- 2. The NLSP device updates the LSP packet length and checksum fields to reflect the size of the LSP packet header (the only information retained in the link state database). The NLSP device then calculates the checksum of the LSP packet header.
- 3. The NLSP device records the time at which the remaining lifetime value became zero.
- 4. After the remaining lifetime value becomes zero, the NLSP device uses the zeroAgeLifetime parameter to determine

how long this device should keep the LSP packet header in memory. After the zero AgeL fetime expires (the default value of this parameter is 60 seconds), the NLSP device purges the LSP packet header from the link state database.

FLOODING LSP PACKETS

As explained in the last issue of NetWare Connection, when an NLSP device transmits an LSP packet, the LSP packet is "flooded" throughout the network. Typically, protocols that flood information cause problems on networks that contain routing loops. (A routing loop is created when networks that are connected by routers contain a circular path.) To ensure that the network can handle flooded LSP packets, Novell engineers used a technology called split horizon.

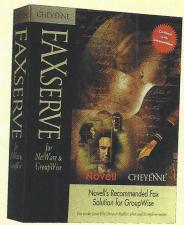

Novell CHEYENE

For a FREE Live Trial visit us at www.cheyenne.com/advert/fs 1 or call 1-800-991-4438



Cheyenne FAXserve 5 For Net Ware & Gr



For NetWare & GroupWise

Novell's Recommended Fax Solution

Features:

- Direct Faxing From Windows Applications
- Full Windows 95 Support
- ISDN & Digital T-1 Support
- Simplified Central Administration

New Features for GroupWise Users:

- Inbound/Outbound GroupWise Faxing
- Shared GroupWise Address Book
- Compatible with Group Wise 4.1 & 5













© 1997 Computer Associates International, Inc. All product names referenced herein are trademarks of their respective companies.

NOVELL CERTIFIED PROFESSIONAL

NetWare Link Services Protocol

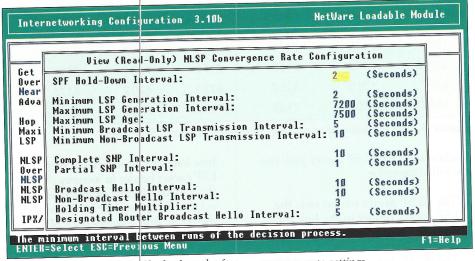


Figure 5. This read-only file displays the fast convergence rate settings.

When an NLSP device receives an LSP packet, the device performs a series of checks to determine if the LSP packet is the proper length and to ensure that the information in the LSP packet has not expired. This NLSP device then forwards the LSP packet to all attached circuits, except the circuit on which the LSP packet was received. This split horizon technology prevents an NLSP device from transmitting an LSP packet back to the circuit from which the packet was received.

CHANGING NLSP PARAMETERS

You can use Novell's INETCFG utility to adjust the way that NLSP operates on a network. NLSP has two types of parameters: Global parameters affect all NLSP devices, and per-binding parameters affect only a particular IPX circuit. (You define an IPX circuit each time that you bind IPX to a LAN driver on the server.)

Because NLSP has both global and per-binding parameters, you can customize how an NLSP device operates on each of its circuits. For example, you could use a global parameter to specify the maximum number of path splits (for load balancing), and you could use a per-binding parameter to specify the cost of individual routes.

To define global parameters, you select the Protocols option in the INETCFG utility; to define per-binding parameters, you select the Bindings option.

Global Parameters

Hop Count Limit. Although the default maximum hop count for an NLSP device is 64, you can increase this parameter up to 127. However, if RIP devices exist on a route, these devices allow a maximum hop count of only 15.

Maximum Number of Path Splits. If two or more routes have an equal cost, this

NetWare Loadable Module Internetworking Configuration 3.106 View (Read-Only) MLSP Convergence Rate Configuration Get (Seconds) SPF Hold-Down Interval: Over Hear 5 7200 (Seconds) Minimum LSP (eneration Interval: Maximum LSP (eneration Interval: Maximum LSP (ge: Adva (Seconds) (Seconds) 7500 Minimum Broadcast LSP Transmission Interval: Hop (Seconds) Minimum Hon-Broadcast LSP Transmission Interval: 10 (Seconds) LSP 30 (Seconds) Complete SMP Interval: Partial SMP Interval: NLSP Over NLSP (Seconds) 20 Broadcast Hello Interval: Non-Broadcast Hello Interval: Holding Timer Multiplier: **NLSP** 20 (Seconds) (Seconds) Designated Router Broadcast Hello Interval: The minimum interval between runs of the decision process. F1=Help ENTER=Select ESC=Previous Menu

Figure 6. This read-only file displays the default convergence rate settings.

parameter determines how many routes an NLSP device should consider in load balancing. The default value is 1 (no path splitting), and the range is 1 to 8.

LSP Size. This parameter defines the size of LSP packets in bytes. The default value is 512 bytes, and the range is 128 to 4,096 bytes.

Override NLSP System ID. The NLSP system ID number identifies an NLSP device. This number is assigned automatically, using part of the NLSP device's internal IPX number.

The designated router uses a variation of its NLSP system ID number to assign the network a LAN ID number. As a result, you may want to manually assign the designated router a more distinctive NLSP system ID number. However, you should keep in mind that the NLSP system ID number must be unique on the entire network.

NLSP Convergence Rate. This parameter determines how fast NLSP information is processed. You can choose one of three values: Fast, Manual, or Default. You can then use the INETCFG utility to view a read-only file that displays the settings for the value you selected.

By selecting the Fast value, you automatically increase the rate that new information is propagated throughout the network. (See Figure 5.) By selecting the Manual value, you can manually configure this parameter's settings to customize the NLSP convergence rate. However, Novell recommends that you keep the Default value, since this value should meet the needs of most networks. (See Figure 6.)

Per-Binding Parameters

NLSP State. An NLSP device has three possible states: on, off, and auto. The default value of this parameter is Auto.

- On. The NLSP device absorbs (processes) and generates RIP packets on a circuit.
- Off. The NLSP device does not absorb or generate RIP packets on a circuit.
- Auto. If the NLSP device detects a RIP router on a circuit, this device absorbs and generates RIP packets. Otherwise, the NLSP device does not absorb or generate RIP packets on a circuit.

Media Access Control (MAC) Channel. This parameter allows you to specify that an NLSP device sends LSP

NOVELL GERTIFIED PROFESSIONAL

NetWare Link Services Protocol

packets to the broadcast address (0xFF-FF-FF-FF-FF) or to an NLSP multicast address. The following are NLSP multicast addresses:

IEEE 802.3	0x09-00-1B-FF-FF-FF
IEEE 802.5	0xC0-00-10-00-00
FDDI	0X09-00-1B-FF-FF-FF
	0xC0-00-10-00-00-0

Maximum Transmission Unit (MTU) Override. This parameter overrides the maximum packet size of a network interface board. The default value is 0, which means that you do not want to override the maximum packet size. You must specify a value between 576 and 65,535 bytes to override the maximum packet size.

You would adjust this parameter if the network included a bridge or another network device that accepts only certain packet sizes. You would also adjust this parameter if you wanted NLSP devices to send smaller packets across a WAN link.

Priority. This parameter determines the priority number of an NLSP device. The priority number is used to determine which NLSP device is the designated router. The default value is 44, and the range is 0 to 127. You can increase this value to force a particular NLSP device to become the designated router.

Cost Override. An NLSP device uses available throughput to determine a route's cost. For example, a 10 Mbit/s Ethernet network is assigned a cost of 20. You can override the cost to force an NLSP device to use a specific route. The range for this parameter is 0 to 63. (See Figure 7.)

Pace Override. The pace indicates how many routing packets can be sent in one second from a specific port. The default value of this parameter is based on available throughput in bits per second, and the range is 1 to 1,000. For example, on a 19,200 bit/s link, the following equation determines the pace:

paceRate = MAX [1, (19,200/10,000)]

The paceRate on this link equals 1.92. The pacing on a faster network (such as a 10 Mbit/s Ethernet network) is actually 18 packets per second. A minimum gap of 1/18 second between LSP packets prevents an NLSP device from overloading other devices on the network.

CONCLUSION

This article explained how an NLSP device updates its link state database and

THROUGHPUT	DEFAULT COSTS	TYPICAL MEDIA	
AT LEAST BUT LESS THAN 0 kbit/s 16 kbit/s 16 kbit/s 48 kbit/s 48 kbit/s 128 kbit/s 128 kbit/s 256 kbit/s 256 kbit/s 512 kbit/s	61 55 45 40	ISDN (U.S. and Europe)	
512 kbit/s	35 30 27 26 25 23 20 19	T1 (1.5 Mbit/s), Corvus Omninet (1 Mbit/s) E1 (2 Mbit/s), ARCnet (2.5 Mbit/s) Token Ring (4 Mbit/s) Ethernet (10 Mbit/s) Token Ring (16 Mbit/s)	
4 Mbit/s 128 Mbit/s 28 Mbit/s 512 Mbit/s 12 Mbit/s 4 Gbit/s Gbit/s 32 Gbit/s	14	FDDI (100 Mbit/s), CDDI (100 Mbit/s) ATM (155 Mbit/s)	

Figure 7. Default costs are based on available throughput.

how you can change NLSP parameters. The third article in this series will explain how NLSP devices interoperate with SAP/RIP devices.

Laura Chappell researches, writes, and lectures on protocol performance, troubleshooting, and optimization. You can reach Laura at lchappell@imagitech.com.

Finally... a better solution to your GroupWise problems!

If the need for better GroupWise support is causing your company internal problems, help is available... just call SupportWise, a network of world-class technical support and consulting professionals.

With SupportWise, you'll receive an unparalleled level of expertise that comes from being one of the largest GroupWise installations in the world.

SupportWise offers several support options to fit any need:

Per Incident Support

No on-hold charges. No minimums. Pay only for the tech support you need.

Contract Support

Get unlimited access to expert technical support.

On-Site Support

Receive affordable, on-site, expert assistance with design, installation, maintenance, and troubleshooting.

SupportWise*

For more information, contact SupportWise.

1-888-GRP-WISE

6450 Poe Ave., Suite 416 Dayton, OH 45414 info@supportwise.com www.supportwise.com



Circle 320 on the reader service card.